

A PARTY PLEASING



RENTAL

# COTTON CANDY

38 Route 10 Westbound  
East Hanover, NJ 07936  
973/887-7264 fax 973/887-0686  
www.aPartyPleasing.com

- **DURING TRANSPORTATION** - the two large knobs located to the left and right of the spinner head **MUST BE HAND TIGHTENED** (clockwise)!!!
- **PRIOR TO OPERATION** - the knobs must be loosened all the way (counter-clockwise)!!!
- Try **NOT** to use an extension cord!!! IF you must use an extension cord, use as short and thick a cord as possible!!!

## INSTRUCTIONS:

1. Make sure switches are all in the "OFF" position. Place metal tub on top of cotton candy machine. Place plastic bubble on top of metal tub. Plug machine in. Flip "MAIN SWITCH" and "HEAT SWITCH" to the "ON" position. Let machine run for about five minutes then flip "MAIN SWITCH" to "OFF" position. This will warm up the machine and prepare it for making candy.
2. Filling machine with floss (a.k.a. sugar)
  - **ALWAYS** fill the machine **WITHOUT** motor running!!!
  - **ALWAYS** fill to approximately 85% capacity!!! This is necessary to obtain a balanced condition or vibration will occur.
  - DO NOT OVERFILL!
3. Turn machine back on. Floss will start to come out in a few seconds. The unit may smoke as it heats up. To eliminate the smoke, turn the heat control knob counter-clockwise in small increments. Once you find the ideal setting for the heat, you should be able to operate near that position each time.

## CLEANING:

1. Unplug machine and remove bubble and tub from base.
2. **DO NOT USE WATER/CHEMICALS ON THE BASE!!!!** Brush off any loose sugar and we will do the rest!!!
3. Rinse bubble and tub with warm water only.
4. **FOR TRANSPORTATION** - the two large knobs located to the left and right of the spinner head **MUST BE HAND TIGHTENED** (clockwise)!!!